

## INSTALLATION GUIDE-PENDANT




Risk of fire and electrical shock. In accordance with national local building and electrical codes, CORONET lighting fixtures must be installed by a qualified electrician. Disconnect power at electrical panel before servicing.


### PART LIST

A	MALE HANGING HARDWARE
B	FEMALE HANGING HARDWARE
C	REFLECTOR
D	EXTRUSION
E	END CAP
F	REFLECTOR ROD





### CROSS SECTION VIEW

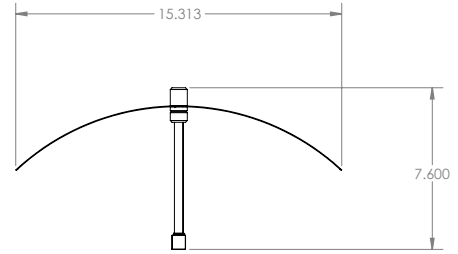

### ASSEMBLY DETAIL

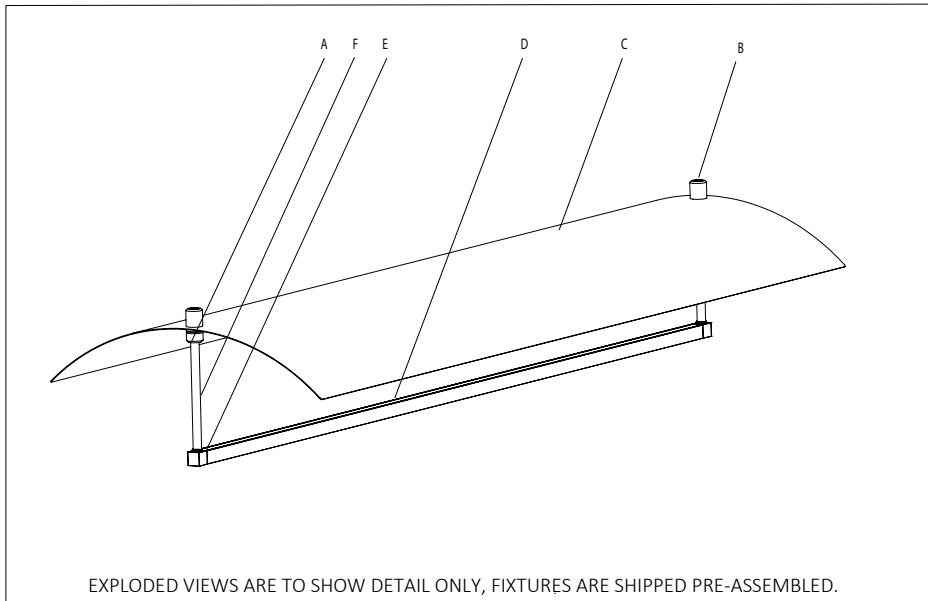

### SIDE VIEW

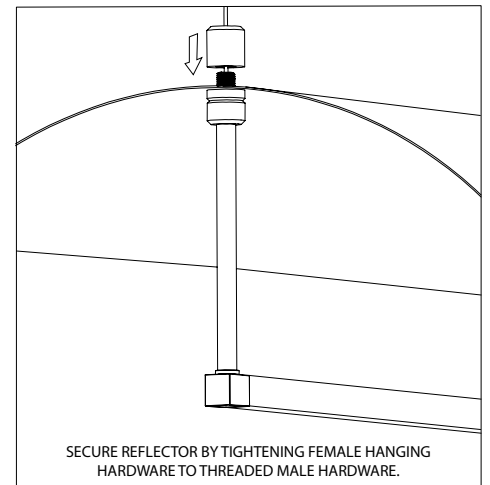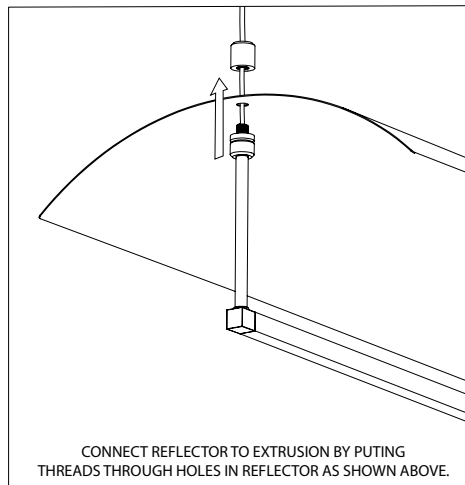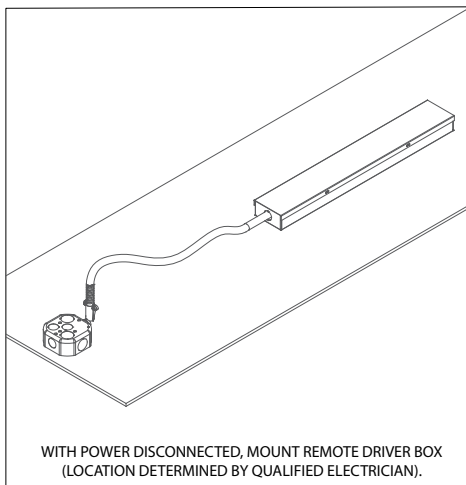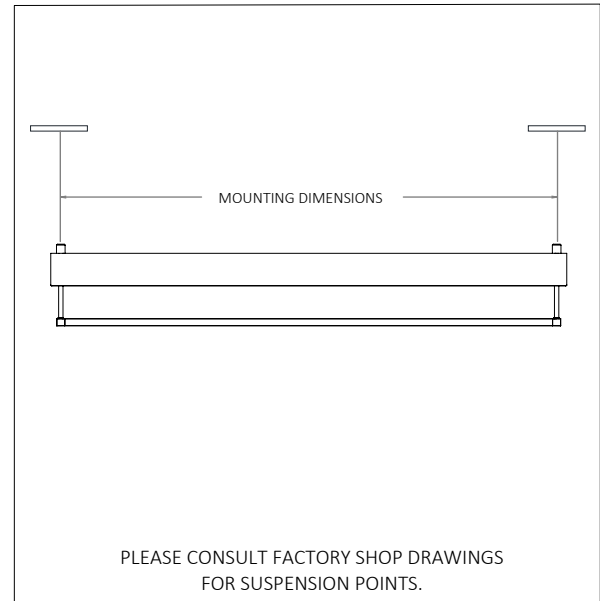


\*NOTE: JUNCTION BOXES MUST BE SOLIDLY FIXED TO THE CEILING AND ATTACHED TO THE STRUCTURAL MEMBER INSIDE THE CEILING BEFORE PROCEEDING WITH INSTALLATION.


## INSTALLATION GUIDE-PENDANT




Risk of fire and electrical shock. In accordance with national local building and electrical codes, CORONET lighting fixtures must be installed by a qualified electrician. Disconnect power at electrical panel before servicing.

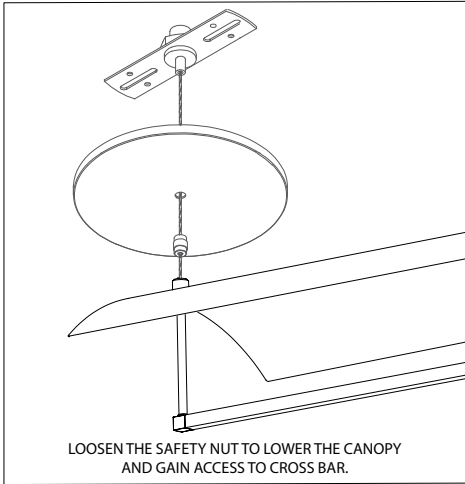


LOOSEN THE SAFETY NUT TO LOWER THE CANOPY AND GAIN ACCESS TO CROSS BAR.

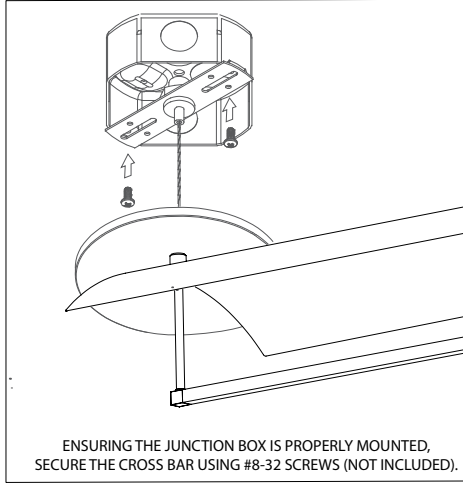


ENSURING THE JUNCTION BOX IS PROPERLY MOUNTED, SECURE THE CROSS BAR USING #8-32 SCREWS (NOT INCLUDED).

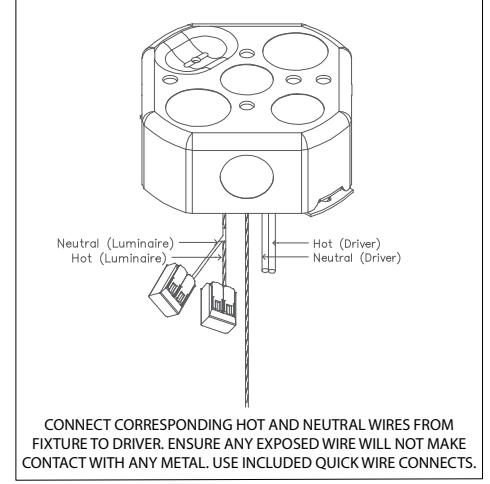


CONNECT CORRESPONDING HOT AND NEUTRAL WIRES FROM FIXTURE TO DRIVER. ENSURE ANY EXPOSED WIRE WILL NOT MAKE CONTACT WITH ANY METAL. USE INCLUDED QUICK WIRE CONNECTS.

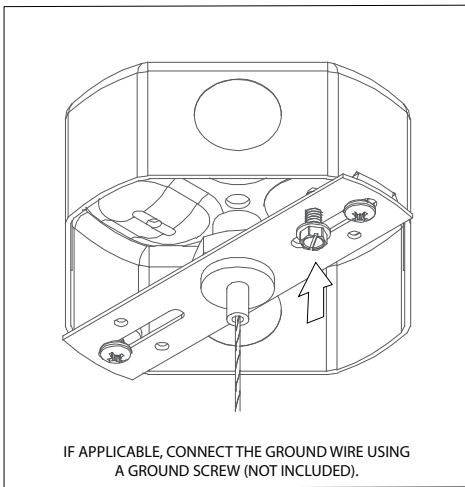

IF APPLICABLE, CONNECT THE GROUND WIRE USING A GROUND SCREW (NOT INCLUDED).

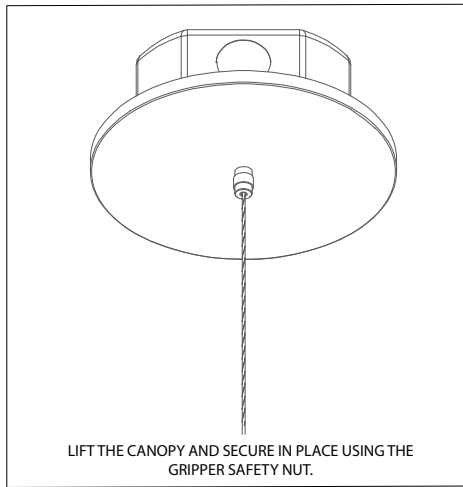

LIFT THE CANOPY AND SECURE IN PLACE USING THE GRIPPER SAFETY NUT.

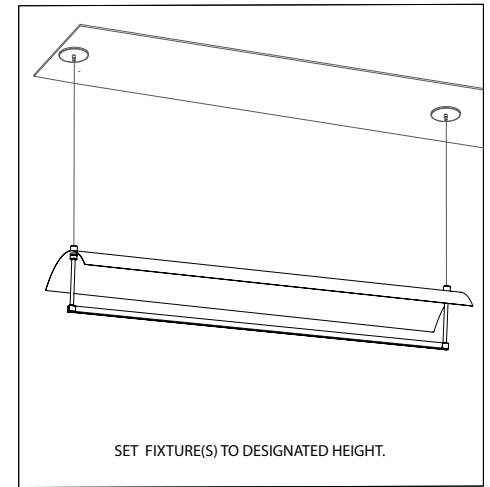

SET FIXTURE(S) TO DESIGNATED HEIGHT.

Fixture must be hung level at the desired height.

### GENERAL INSTALLATION CONSIDERATIONS - See submittal drawings for job specific data.

Operating Temperature.....-40°C to 50°C  
 Operating Voltage.....110VAC-277VAC, 50Hz-60Hz  
 Weight.....2.6 lb/ft  
 Dimensions.....See submittal drawings

- Installation by a certified electrician only.
- Read and understand the installation instructions before attempting to install or use the fixture.
- Only use fixtures with voltage for which it is rated. Do not exceed the specified voltage and current input.
- Do not use the fixture if the housing, lens, or power cable is damaged.
- Ensure that the main power supply is off before installing or wiring the fixture.
- Method of wire connection to be determined by local electrical codes and regulations.
- The external flexible cable of this luminaire cannot be field replaced; if the cord is damaged, contact Coronet.
- The light source contained in this luminaire shall only be replaced by the lighting manufacturer or his service agent or a similar qualified person.

Please contact our technical support team for assistance.

NOTE: JUNCTION BOXES MUST BE SOLIDLY FIXED TO THE CEILING AND ATTACHED TO THE STRUCTURAL MEMBER INSIDE THE CEILING BEFORE PROCEEDING WITH INSTALLATION.